

INSTALL INSTRUCTIONS C-TSM-CHGR-X-1

TRUNK SIDE MOUNT FOR 2011-2013 DODGE CHARGER

X = "D" DRIVERS SIDE OR "P" PASSENGER SIDE

TOOLS REQUIRED:

Phillips Screwdriver
Jig Saw

Powered drill with 5/32" drill bit

HARDWARE:

QTY	DESCRIPTION
5	#10 x 3/4" Sheet metal screws


PART #
GSM33195

Always!

- Read all instructions before installing any Havis, Inc. products.
- Check for obstructions (Wire, brake lines, fuel tank, etc.) before drilling any holes!
- Use hardware provided with install kit

C-TSM-CHGR-P-1 shown
Trunk Side Mount
(Passenger Side)

NOTE: This instruction
shows the passenger side
installation. The Drivers side
will install the same way.

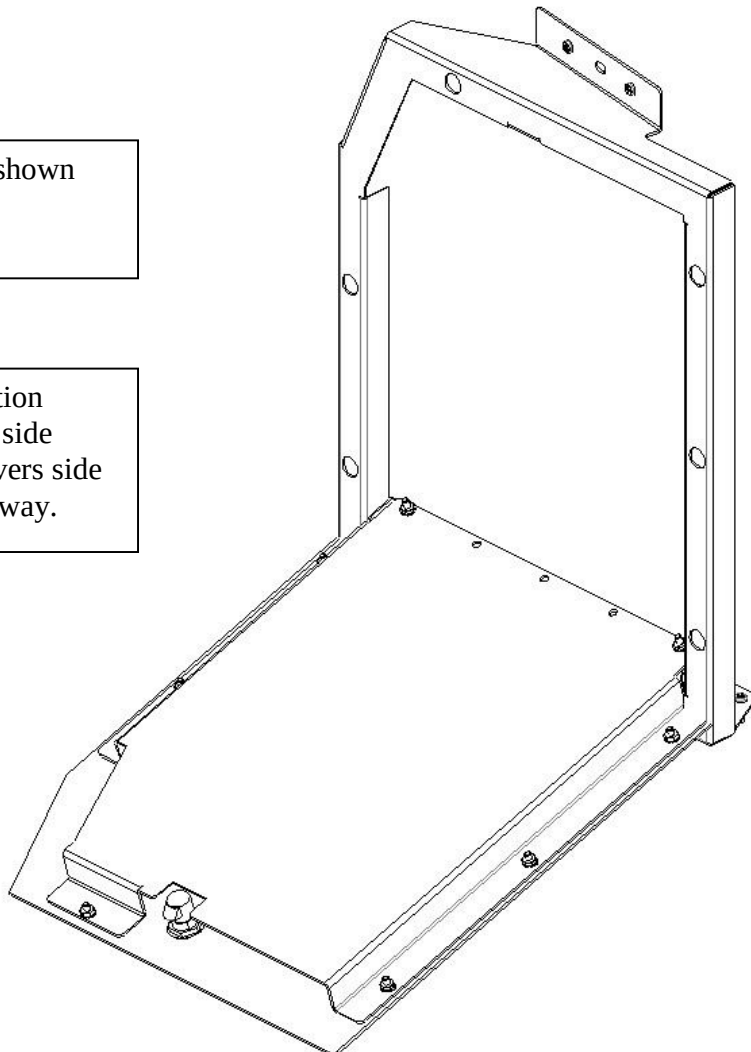



View of passenger side trunk area prior to installation.



Remove side cargo hook.
Mount screw to be reused later
(Phillips screwdriver)



Remove rear loop trim panel
fastener



Remove fender liner.
Run wiring as needed for
emergency equipment.



Unclip and move wiring at side floor
area. Make sure it is repositioned so
it will not get damaged.
Replace fender liner.




Place Trunk Side Mount frame
assembly into position and attach to
inner fender with previously
removed Cargo hook screw into
original hole.



Make sure door has clearance at
rear trunk trim panel.



With Trunk Side Mount in
position, drill three 5/32" holes
into floor.

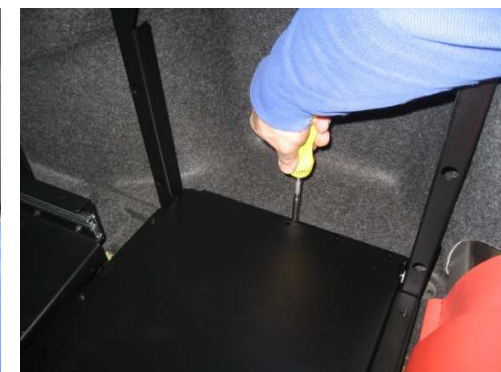

Attach lower frame to floor with
10 x 3/4" sheet metal screws.



Drill 5/32" holes at upper bracket (next to OEM screw) and attach with # 10 x 3/4" Sheet metal screws



Mount and wire equipment on inside door panel.



Finished Passenger-Side Mount shown with full width trunk tray



Finished C-TSM-CHGR-P-1 (Passenger Side Trunk Side Mount)
Shown with Full Size Spare Tire.

NOTE: If your vehicle has the small donut spare tire, the flip up trunk liner should just clear the Trunk Side Mount.